motorola CRUSH™

Getting Started Guide

congratulations

Your new **motorola** CRUSH™ phone will make you the envy of your friends. Just tap the large, high-resolution display to use all of the phone's features.

Take great quality pictures with your phone's 2.0 megapixel camera, and send them to your friends (page 30). Make a mini-movie with your phone's camcorder (page 32). Slip a microSD card into the removable memory slot (page 7), then use the music player to listen to your tunes (page 34).

We've crammed all of the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. So go on, check it out, then feel the beat.

more information

To learn even more about your phone and accessories, go to **www.motorola.com/support**.

Caution: Before using your phone for the first time, please read the important **Safety & Legal** information at the back of this guide (page 53).

DRAFT

this guide

symbols in this guide	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

DRAFT

contents

your phone 5
main menu 6
let's go 7
basics 8
home screen 11
main menu 12
calls 13
phonebook 15
messages 18
text entry 20
tips & tricks 23
personalize 25
active 29
photos 30
videos 32
music 34
Bluetooth® wireless 41
cable connections 44
memory card 47
tools 49

DRAFT

security 50
service & repairs 52
Safety & Legal 53

DRAFT

your phone

the important keys & connectors

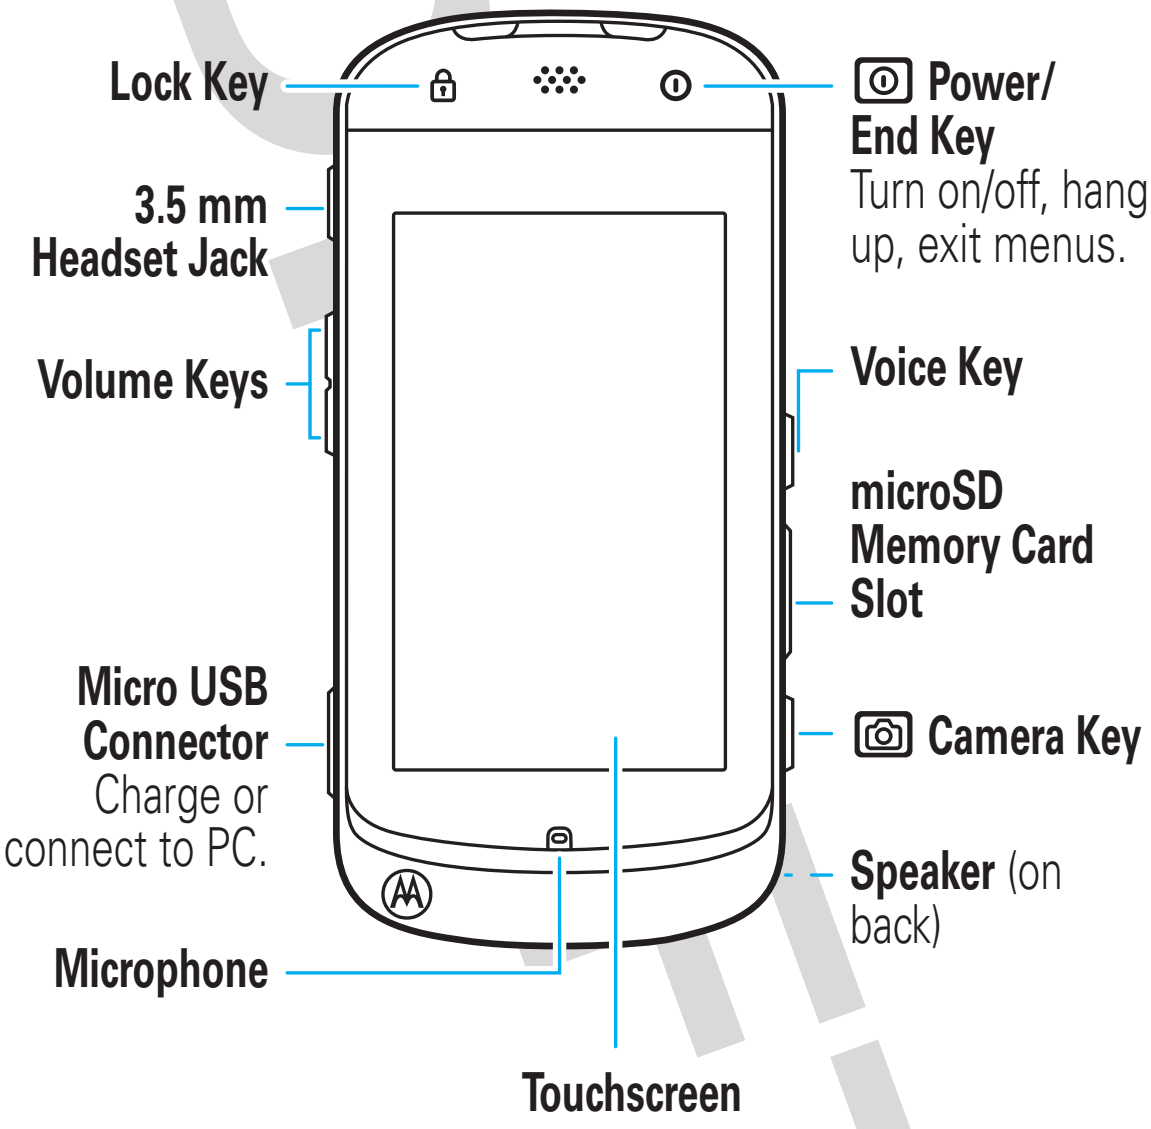

DRAFT

main menu

Messages

Dialpad

Calls

Phonebook

Settings
- Sounds
- Display
- Phone
- Call
- Messaging
- Security
- Memory

Bluetooth

Ringtones

Tools
- Datebook
- Alarm Clock
- Pedometer
- Calculator
- Tip Calculator
- Notepad
- Voice Commands
- World Clock

easyedge *

Multimedia
- Ringtones
- Sounds
- Pictures
- Videos
- Camera
- Camcorder

Datebook

Pac-Man *

Music Player

Phone Info
- Phone Settings
- Text Input
- Icon Glossary
- SW/HW Version

Your Navigator

Camera

* Optional and/or network dependent feature. Not available in all areas.

This is the standard main menu layout. **Your phone's menu may be different**.

DRAFT

let's go

let's get you up & running

❶ cover off:

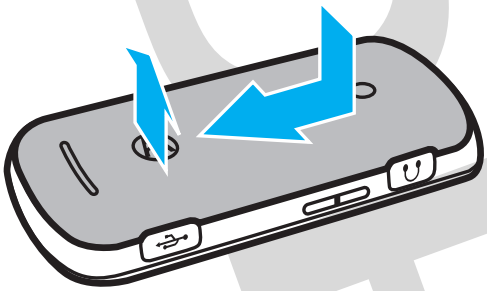

❷ battery:

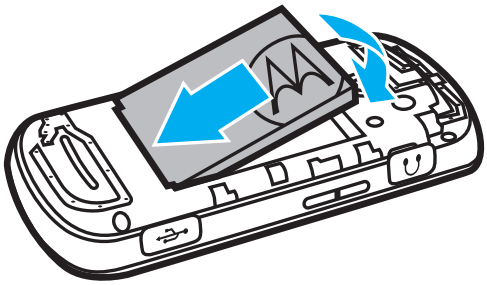

❸ cover on:

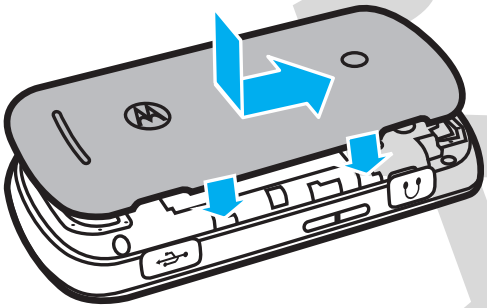

❹ microSD:

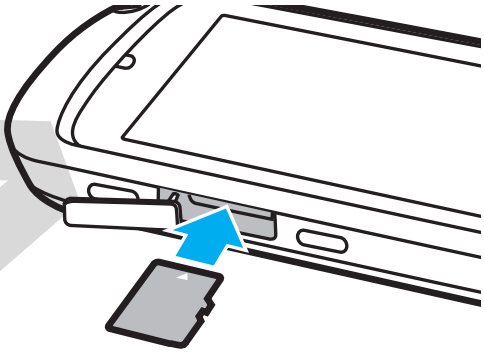

❺ charge:

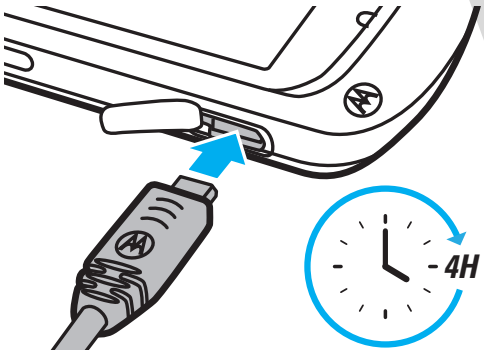

DRAFT

Caution: See **Battery Use & Safety** (page 53).

here's a few essentials

turn it on & off

Press and hold ⏻ for a few seconds or until the touchscreen lights up.

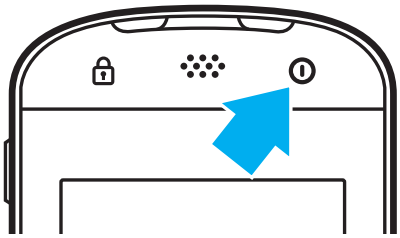

make & answer calls

To **make a call**:

1. Tap Dialpad.
2. Enter a phone number.
3. Tap Call.

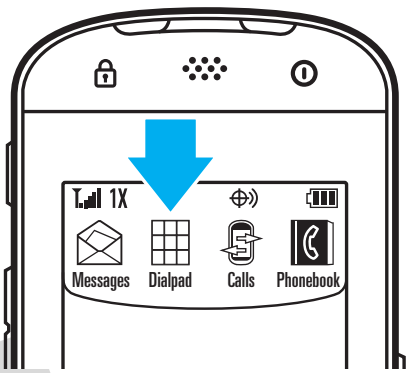

To **answer a call** when your phone rings and/or vibrates, just tap Answer.

end a call

To **hang up**, tap End Call or press ⏻.

DRAFT

touchscreen tips

To conserve battery life, the touchscreen goes dark when your phone is inactive. To reactivate the screen, press ⏻.

To **select** menu items, tap the item.

To **highlight** an item, like a message in your inbox, drag across the item from left to right. To unhighlight, drag right to left.

To **move a long list**, touch the bottom item in your screen and drag upward, just like pushing a piece of paper. If you accidentally open an item rather than moving the menu, go back and try touching the display in one corner and sliding to the opposite corner.

To **go back** to the previous screen, tap ⟨.

For **best results**:

- Tap the screen with your fingertip, not your fingernail or other object.
- Tap the screen lightly.
- Do not tap the screen with wet or dirty fingers.

DRAFT

store contacts

1. Tap Phonebook.
2. Tap **Add New Contact** to create a new contact, or tap a contact in your list and tap **Edit** to edit it.
3. Tap the contact's details (such as **Name**) to enter or edit information. (To enter text, see page 20.)
4. Tap **Save** to save the contact.

call or text contacts

1. Tap Phonebook.
2. Move to the contact you want.

   Shortcut: Tap **A - Z** to jump to contacts that begin with a letter you specify.
3. To **call**, tap the phone icon next to the name.

   To **send a text message**, tap the name, then tap the message icon next to the phone number.

DRAFT

home screen

quick access to the information you need most

The *home screen* appears when you turn on the phone, or when you press ⏻. Phone status indicators appear at the top of the home screen:

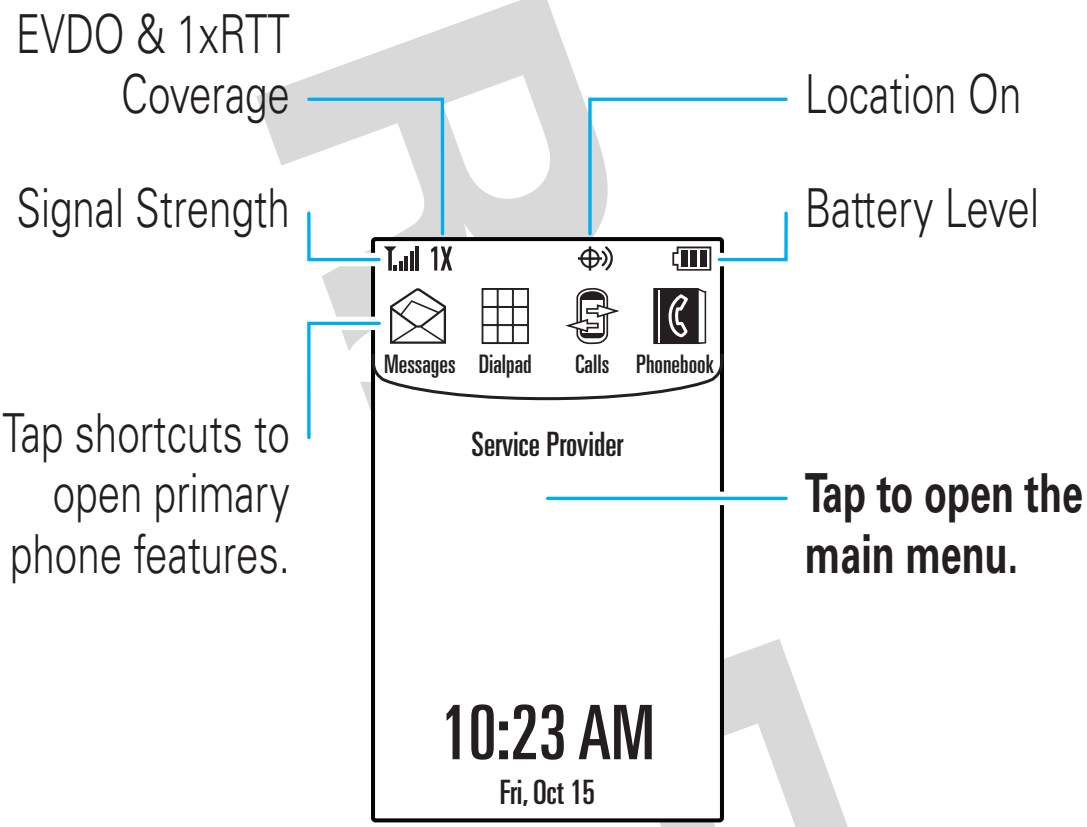

Note: Your phone's home screen may be a little different.

Tip: For a description of the status indicators that can appear on your phone: Tap under the shortcut icons to open the main menu, then tap **Phone Info** > **Icon Glossary** > **Status Bar**.

DRAFT

main menu

the world at your fingertips

To **open** the main menu, tap the home screen under the shortcut icons:

Tap menu icons to open all phone features.

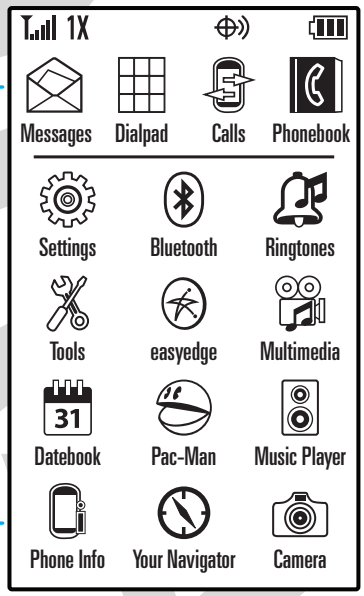

Press ⏻ to close the main menu & return to the home screen.

To **close** the main menu and return to the home screen, press ⏻.

DRAFT

calls

it's good to talk

For the basics, see page 8.

redial a number

1. Tap Calls.
2. Move to the entry you want to call.
3. Tap the call icon next to the entry.

go handsfree

To **activate the speakerphone** during a call, tap Speaker. Your phone plays an audio alert, and shows Speaker On.

To **turn off the speakerphone**, tap Speaker again.

Note: You can also use **headsets or car kits** with a 3.5 mm wired connection (page 6) or Bluetooth® wireless connection (page 41). The speakerphone won't work when your phone is connected to a handsfree headset or car kit.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

DRAFT

in-call options

During a call, you can tap shortcuts to open your Messages, Dialpad, Calls, or Phonebook. You can also tap options to Mute the call, activate the Speaker, or connect a Bluetooth headset. Additional options appear when you connect a Bluetooth® headset or activate TTY mode during a call.

emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

To call an emergency number: Tap Dialpad, enter the emergency number, then tap Call.

Note: Your mobile device can use AGPS technology to help emergency services find you (page 57).

PRELIM

got their number? now do more

To store and call contacts, see page 10.

edit or delete contacts

1. Tap Phonebook.
2. Move to the contact you want.
3. To **edit** the contact, tap the name, then tap Edit.

   To **delete** the contact, tap the name, then tap Erase.

store additional contact information

You can store more than just a number for a contact:

1. Tap Phonebook.
2. Move to the contact you want, tap the name, then tap Edit.
3. Use the fields to enter more contact information:

   - **Name & Numbers:** Store multiple numbers, such as home, work, and mobile.
   - **Email:** Store email addresses.

DRAFT

- **Picture:** Add a photo so you can see who's calling.
- **Ringtone:** Set a unique ringtone and message alert so you can hear who's calling.

4. Tap **Save** to save your changes.

speed dial contacts

Note: Speed dial number 1 is already assigned to your voicemail number.

To **assign** a speed dial number to a contact:

1. Tap **Phonebook**.
2. Tap **CONTACT LIST** at the top of the screen, then tap **SPEED DIAL**.
3. Tap an unassigned speed dial number.
4. Tap the contact.

When you tap a contact name, its speed dial number is identified by the speed dial indicator .

To **activate** speed dialing: Open the main menu, tap **Settings** > **Call**, then tap the **One Touch Dial** button to turn it **On**.

DRAFT

To **call speed dial number 1 through 9**: Tap Dialpad, then tap and hold the single-digit speed dial number for one second.

To **call a double-digit speed dial number**: When you enter the speed dial number, tap and hold the second digit. (For example, to call speed dial number 23, tap 2, then tap and hold 3).

DRAFT

messages

sometimes it's better 2 say it in a message

create & send text messages

1. Tap Messages > New Text Message.
2. Tap TO:, then select a recipient from your contact list, or tap Dialpad to enter a new phone number.

   Note: You can repeat this step to add up to ten recipients.
3. Tap Text, then enter the message (page 20).
4. To send the message, tap Send.

receive text messages

When you receive a message, your phone shows a New Message notification.

To **read** the message, tap View Now, then tap the message.

To **dismiss** the notification, tap View Later. Your phone stores the message in the inbox, and lists the number of unread messages.

DRAFT

To **open** the message inbox:

1. Tap Messages > Messages. Newest messages are listed first.
2. Tap a message to open it.

voicemail

When you receive a voicemail message, your phone shows a **New Voicemail** notification.

To **listen** to the message, tap **Call Voicemail**.

To **dismiss** the notification, tap **Dismiss**.

To **check** your voicemail, tap Dialpad, then tap and hold 1.

DRAFT

text entry

how fast can u text?

Some features let you enter text, like this text message screen:

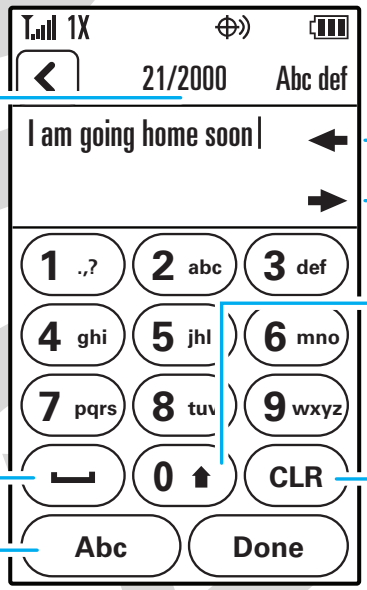

Use the keypad that appears on the screen to type.

Tip: To **move the cursor**, just tap where you want the cursor to appear. You can also move the cursor by using the volume keys or touching the onscreen arrows.

DRAFT

text entry

If you turn the phone sideways (toward the left) while entering text, your phone shows a full text keypad:

Select uppercase/ lowercase text.
Cancel message.
I am going home soon
CLR
21/2000
Abc
q w e r t y u i o p
a s d f g h j k l
z x c v b n m , .
X ! 123!/ Space ? Done
Delete character to left of cursor.
Start a new line.

Tap the text entry area for on-screen navigation arrows (◀▶). Resume typing to bring back the counter and text entry mode indicator.

To **change modes** when you are entering text, tap the mode key in the lower left corner of the screen. You can choose:

entry modes	
iTAP	The phone predicts the word you want, with just one key tap per letter.

DRAFT

text entry

entry modes	
Abc	Tap a key repeatedly to cycle through its letters and number.
123	Enter numbers only. **Shortcut:** In other modes, tap and hold a number key to enter its number.
Symbols	Enter symbols. **Shortcut:** In other modes, tap 1 to enter basic symbols or punctuation.

To use **uppercase letters** when you are entering text in iTAP or ABC modes, tap 0. Symbols at the top of the screen indicate whether your phone will use one uppercase letter at the beginning of each sentence (Abc def), no uppercase (abc def), all uppercase (ABC DEF), or uppercase first letter for each word (Abc Def).

To **accept** a word completion, tap the text entry area.

DRAFT

tips & tricks

a few ways to make your phone even easier to use

To...	
lock the touchscreen and keys	To **lock** your phone, press the lock key . To **unlock** your phone, drag the unlock button to the right in the touchscreen display.
set airplane mode	To **turn off** your phone's calling and wireless connectivity features where prohibited, open the main menu, tap Settings > Phone > Phone Settings, then tap the Airplane Mode button to turn it On.
create a voice record	To **create** a voice record, press and hold the voice key on the side of your phone (page 5). To **listen** to the voice record, open the main menu, then tap Multimedia > Sounds > *voice record*.

DRAFT

improve battery life

- To make your **backlight** turn off sooner: Open the main menu, then tap Settings > Display > Backlight > 30 seconds.
- To turn off **Bluetooth® power** when you're not using it: Open the main menu, tap Bluetooth, then tap the Bluetooth Power button to turn it Off.

voice commands

Press and release the voice key on the side of your phone (page 5), then speak a voice command:

- **Call <Name or #>**
- **Send <MSG Type>**
- **Go To <Shortcut>**
- **Check <Item>**
- **Contact <Name>**
- **Help**

DRAFT

add your personal touch

sounds

You can select the ringtones, sounds, or music your phone uses for incoming calls and other events (such as new messages), and set the master volume for all ringtones.

set call, event, & alert sounds

1. Open the main menu, then tap Settings > Sounds > Ringtones & Alerts.
2. Tap the tone you want to change (such as Call Alerts or TXT Message).
3. Tap Tone, then tap Ringtones, Sounds, or Music, and select the sound you want to use.

Shortcut: Open the main menu, tap Ringtones > *ringtone* > Set As > Ringtone, Contact ID, Text Message Alert, or Pic/Video Message Alert.

DRAFT

set keypad volume

1. Open the main menu, then tap Settings > Sounds > Keypad Volume.
2. Drag the volume level or touch the volume bar to select Off, Low, Medium Low, Medium, Medium High, or High.

set power alerts and service alerts

Set your phone to play a tone when you turn the power on or off, or to let you know when network conditions change.

1. Open the main menu, then tap Settings > Sounds > Power On/Off or Service Alerts.
2. Tap an alert tone button to turn it On or Off.

set master volume

Press the volume keys up or down to set the ringtone master **volume** level, set the phone to **vibrate** for incoming calls, set an event **alarm**, or turn all sounds **off**.

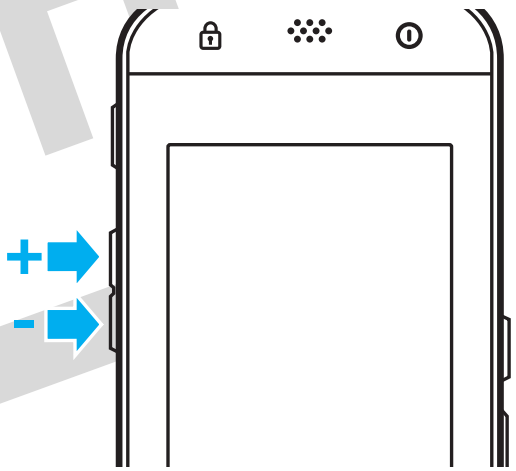

DRAFT

Note: Ringtones do not sound when the master volume is set to **Vibrate Only**, **Alarm Only**, or **All Sounds Off**.

talking phone

Set your phone to **speak aloud** when you tap keys or menu entries, when you receive a call, and when you select a contact or recent call:

1. Open the main menu, then tap **Settings** > **Sounds** > **Voice Readout**.
2. To set whether your phone speaks **Keypad Digits**, **Contact List Entries**, **Main Menu Entries**, or **Calls List Entries**, tap an option button to turn it **On** or **Off**.

   To set whether your phone speaks a name or phone number when you receive a call with caller ID, tap **Caller ID Alert**, and choose **Ring Only**, **Caller ID Then Ring**, or **Caller ID Repeat**.

Note: Your phone does not speak if you receive a call when the master volume is set to **Vibrate Only**, **Alarm Only**, or **All Sounds Off**.

DRAFT

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

1. Open the main menu, then tap **Settings** > **Display** > **Wallpaper** > **Pictures** or **Animations**.
2. Tap an image or animation, then tap **Insert**.

DRAFT

feel the burn!

pedometer

The pedometer counts and reports your steps—it's the ideal fitness companion.

To **set up a daily exercise routine** with the pedometer:

1. Open the main menu, then tap Tools > Pedometer > Setup to set a daily steps goal, set the measurement units (US or metric), and set up your physical profile (gender, weight, and height).
2. Tap ‹, then tap Turn On to turn on the pedometer.

The pedometer counts the number of steps you take each day, and lists the approximate number of calories used and distance walked for the day.

To **view your step counts** for the past 30 days, open the main menu, then tap Tools > Pedometer > History.

Note: Pedometer report numbers are estimates and may not be totally accurate.

To **turn off the pedometer**, open the main menu, then tap Tools > Pedometer > Turn Off.

DRAFT

see it, capture it, send it!

take & send photos

To **turn on** the camera: Open the main menu, then tap Camera.

Shortcut: Press the camera key on the side of your phone.

Tip: Hold the phone upright to take a portrait photo, or turn the phone sideways (toward the left) to take a landscape photo.

To **take a photo**:

1. Point the camera lens at the subject.
2. Press the camera key to take the photo.

   The photo is automatically saved in phone memory or on the memory card (depending on your settings), and is named after the date and time you took it.
3. Your phone temporarily shows options to **Send**, **Send to Online Album**, or **View** the photo, then returns to the camera viewfinder.

DRAFT

❹ The camera shows a thumbnail image of the photo in a red box next to the viewfinder. Tap the photo thumbnail, then tap **Image Options** to see the following buttons:

- **Send** opens a message with the photo inserted.
- **Set As** lets you set the photo as your wallpaper or as a picture ID for a phonebook contact.
- **Info** shows details about the photo file.
- **Erase** deletes the photo.

If you don't select an option, your phone returns to the camera viewfinder.

To **adjust camera settings**: Tap the camera viewfinder screen to temporarily show control icons that let you zoom in/out, view stored photos, or switch to the video camcorder.

To **see** your photos: Open the main menu, then tap **Multimedia** > **Pictures**

To set the storage location for the photos you take: Open the main menu, then tap **Settings** > **Memory** > **Pictures** > **Automatic**, **Phone Memory**, or **Card Memory**

DRAFT

for those moments when you really had to be there

record & send videos

To **turn on** the video camcorder: Open the main menu, then tap Multimedia > Camcorder.

Shortcut: When the camera is on, tap the camera viewfinder screen, then tap the camcorder icon to turn on the video camcorder.

Tip: Turn the phone sideways (toward the left) to record a camcorder video.

To **record a video**:

1. Point the camera lens at the subject.
2. Press the camera key to start recording.
3. Press the camera key again to stop recording.

   The video is automatically saved in phone memory or on the memory card (depending on your settings), and is named after the date and time you took it.
4. Your phone temporarily shows options to Send or Erase the video, then returns to the camcorder viewfinder.

DRAFT

5 The camcorder shows a thumbnail image of the video in a red box next to the viewfinder. Tap the video thumbnail, then tap **Video Clip Options** to see the following buttons:

- **Send** opens a message with the video inserted.
- **Info** shows details about the video file.
- **Erase** deletes the video.

Select an option, or tap the display and then tap ‹ to return to the camcorder viewfinder.

To **adjust camcorder settings**: Tap the camcorder viewfinder screen to temporarily show control icons that let you zoom in/out, view stored videos, switch between standard and MMS video recording modes, or switch to the photo camera.

To **see** your videos: Open the main menu, then tap **Multimedia** > **Videos**

To set the **storage location** for the videos you record: Open the main menu, then tap **Settings** > **Memory** > **Videos** > **Automatic**, **Phone Memory**, or **Card Memory**

DRAFT

when music is what you need...

Note: You'll need to install an optional microSD memory card in your phone to use the music player.

Note: Your phone supports Microsoft® Windows® XP and Windows Vista®. Other operating systems may not be compatible.

get music

Just load your favorite music onto your Windows® PC, then transfer the music from the PC to your phone.

Note: Your phone does not support DRM-protected song files. Your phone's music player can play the following types of song files: **MP3**, **AAC**, **WMA**.

You can **buy** song files from on-line music stores (such as Amazon, Rhapsody, and Napster).

You can also **rip a CD** (load song files from a music CD onto your PC) with Microsoft Windows Media Player version 11 or later. You can download Windows Media Player from **www.microsoft.com/windowsmedia**.

DRAFT

1. **On your Windows PC**, open Windows Media Player 11.
2. Insert a CD in your computer's CD drive.
3. In the Windows Media Player window, click the "Rip" tab.
4. Select the songs you want to import and click "Rip Music".

If your computer is connected to the Internet, the media player may retrieve information such as song titles, album name, artist name, and album artwork. This information will display in your phone's music player after you transfer the music to your phone.

Note: The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

DRAFT

transfer music

Note: Your phone's music player can play the following types of song files: **MP3**, **AAC**, **WMA**.

To **connect** your phone to your Windows PC:

1. Insert a microSD memory card into your phone (page 7).
2. Set your phone to mass storage mode: Open the main menu, then tap Settings > Phone > Phone Settings > USB Mode > Mass Storage.
3. Connect a Motorola Original USB cable to your phone (page 44) and your PC.

   Note: Some phone functions are temporarily unavailable when a USB connection is active.

TM

Now that you've connected, use **USB drag and drop** to copy your music:

1. **On your Windows PC**, double-click on "My Computer" to find the "Removable Disk" icons for your phone and memory card.

DRAFT

2. Double-click the "Removable Disk" icon for the memory card.
3. In the "Removable Disk" window, create the "Music" folder (if it doesn't already exist).

   Note: The music player checks for songs only in this folder.
4. Drag and drop song files onto the "Music" folder.
5. When you're done, right-click the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen, then select "USB Mass Storage Device" (your memory card).
6. Disconnect the USB cable.

play music

Open the main menu, then tap **Music Player** > *category* > *song* or *playlist*.

You can select a song or playlist from these categories: **Recently Played**, **All Songs**, **Playlists**, **Albums**, **Artists**, or **Genres**.

Note: If you can't find artist, album, or genre information for a song, the information may not be available.

DRAFT

While a song is playing, use the following buttons to control song playback.

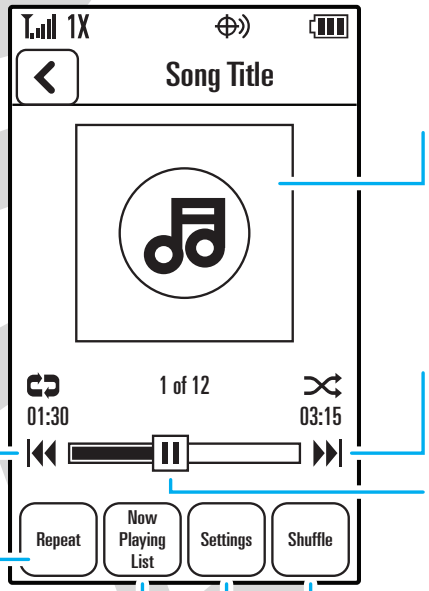

Tap to see album artwork/ visual effects/ song info.

Tap to play previous song. Tap & hold to rewind.

Tap to skip to next song. Tap & hold to fast forward.

Tap to pause/play.

Repeat Playlist/Song/Off

Shuffle On/Off

View song list.

Select player settings.

If you receive a call during a song, the music player pauses the song until the call is over.

DRAFT

playlists

Personalize your music collection by creating your own playlists.

To **create** a playlist:

1. Open the main menu, then tap **Music Player** > **Playlists** > **Create New**.
2. Enter a name for the playlist and tap **Done**.

   Note: The name cannot exceed 32 characters, and cannot include the characters / \ : * ? < > | “
3. Tap the songs you want to add to the playlist. The songs you select are identified by a checkmark.
4. Tap **Done** when you’re done adding songs.

To **add a song** to a playlist: Tap the playlist and XXXXX.

To **remove a song** from a playlist: Tap the playlist, tap the song, and XXXXX.

To **delete** a playlist: Tap the playlist and XXXX.

DRAFT

customize music player

On the music player screen, tap **Settings** > **Audio Effects** or **Visual Effects**.

DRAFT

Bluetooth® wireless

lose the wires and go wireless

turn Bluetooth power on or off

Open the main menu, tap Bluetooth, then tap the **Bluetooth Power** button to turn it **On** or **Off**.

Note: To extend battery life, set **Bluetooth Power** to **Off** when not in use.

connect new devices

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, see page 42.

1. Make sure the Bluetooth device you are pairing with is in *discoverable* mode (see device instructions).
2. Open the main menu, then tap Bluetooth > **DeviceList/NewDevice** > **Add New**.

   Note: If Bluetooth power is not turned on, your phone prompts you to turn it on.
3. Tap **OK** to search for available Bluetooth devices. Your phone lists the devices it finds within range.

DRAFT

4. Tap **Pair** next to the device you want to connect. Your phone tries to pair with the device.
5. If prompted, enter the device PIN or passkey (usually set to **0000**).
6. Tap **Yes** to confirm the connection.

Tip: For specific information about a device, check the instructions that came with it. For more Bluetooth support, go to **www.motorola.com/Bluetoothsupport**.

For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

reconnect devices

To **automatically reconnect** your phone with a paired device: Turn on your phone's Bluetooth power, then move the device near the phone and turn the device on. If the device doesn't connect, turn it off and back on, and make sure your phone's Bluetooth power is on.

DRAFT

To **manually reconnect** your phone with a paired device: Open the main menu, tap Bluetooth > DeviceList/NewDevice, then tap Connect next to the device name.

disconnect devices

To **automatically disconnect** your phone from a paired device, simply turn the device off.

To **manually disconnect** your phone from a paired device: Open the main menu, tap Bluetooth > DeviceList/NewDevice, then tap Disconnect next to the device name.

DRAFT

cable connections

your computer wants a friend

connect

Your phone has a micro USB connector, so you can connect it to a PC to transfer data.

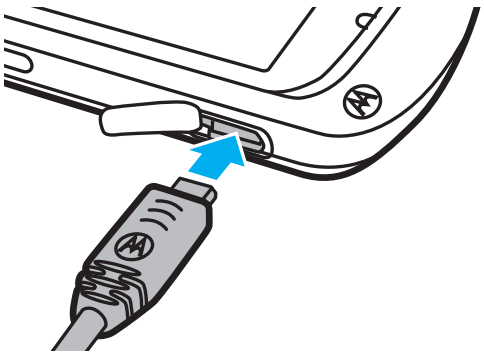

Before you connect an optional USB cable, tell your phone what type of connection you want to use: Open the main menu, then tap **Settings** > **Phone** > **Phone Settings** > **USB Mode** > **Mass Storage** or **Modem/COM**.

Note: Motorola Original USB data cables and supporting software are sold separately. Check your computer or device to determine the type of cable you need.

MOTOROLA ORIGINAL™

DRAFT

transfer

Note: To install an optional microSD memory card in your phone, see page 7.

Using a USB cable connection, you can connect to your PC to access your phone's memory card.

Note: When your phone is connected to a computer, it cannot be used for anything else, including making emergency calls. To restore the phone to normal use, disconnect it from the computer.

On your phone:

1. **Disconnect the cable** from your phone if it's connected.
2. Open the main menu, then tap Settings > Phone > Phone Settings > USB Mode > Mass Storage.
3. **Connect the cable** to your phone (page 44) and your PC.

DRAFT

cable connections

On your computer:

1. Double-click on "My Computer" to find the "Removable Disk" icons for your phone and memory card.
2. Double-click the "Removable Disk" icon for the memory card.
3. Drag and drop files into these folders on the memory card (create the folders if necessary): Music, Picture, Sound, or Video.
4. When you're done, right-click the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen, then select "USB Mass Storage Device" (your memory card).
5. Disconnect the USB cable.

DRAFT

store more

format

You need to format a memory card (up to 16 GB), **using the phone**, before using it for the first time. This creates the necessary folders and ensures your phone can read the contents of the card.

Caution: Formatting the memory card erases all content on the card.

To format the memory card: Open the main menu, then tap Settings > Memory > Card Memory > Format Card

DRAFT

show & manage files

Note: To install an optional microSD memory card in your phone, see page 7.

Do not remove your memory card while your phone is using it or writing files on it.

To see the **stored files** on your memory card: Open the main menu, then tap Settings > Memory > Card Memory > Pictures, Videos, Music, or Sounds.

To see the **available memory** on your memory card: Open the main menu, then tap Settings > Memory > Card Memory. Used memory and available memory are listed at the top of the screen.

To **move a file** from your phone to your memory card: Select the file, then tap Send > Memory Card.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while the memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

DRAFT

keep up with life

add a calendar event

1. Open the main menu, then tap Datebook.
2. Tap the desired date, then tap **New Event**.
3. Enter the appointment name and details.
4. Tap **Save** to save the appointment.

set an alarm

1. Open the main menu, then tap **Tools** > **Alarm Clock**.
2. Tap **Add ALARM 1**, **Add ALARM 2**, or **Add ALARM 3**.
3. Set the alarm time, alarm tone, and recurrence.
4. Tap the **Set Alarm** button to turn the alarm **On**.
5. Tap **Done** to save the alarm setting.

DRAFT

keep your phone safe

codes & passwords

Your phone's four-digit **passcode** is originally set to the last four digits of your phone number. To change the passcode:

1. Open the main menu, then tap Settings > Security.
2. When prompted, enter the passcode and tap Done.
3. Tap Change Passcode.
4. Enter the new four-digit passcode and tap Done.
5. Re-enter the new passcode and tap Done.

DRAFT

lock & unlock phone

You can lock your phone to keep others from using it.

1. Open the main menu, then tap Settings > Security.
2. When prompted, enter the passcode and tap Done.
3. Tap Lock Phone Now.
4. Tap Yes to confirm that you want to lock the phone.

To unlock your phone:

1. From the home screen, tap Unlock.
2. Enter the passcode and tap Done.

DRAFT

service & repairs

we're here to help

Go to **www.motorola.com/support**, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

DRAFT

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection),

DRAFT

Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- **www.motorola.com/recycling**
- **www.rbrc.org/call2recycle/** (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.

DRAFT

- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is ___ W/kg, and when worn on the body, as described in this guide, is ___ W/kg. Body-worn measurements can differ, depending upon available accessories

DRAFT

and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

http://www.phonefacts.net

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

http://www.cwta.ca

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

DRAFT

AGPS & Emergency Calls

When you make an emergency call, your mobile device can use *Assisted Global Positioning System* (AGPS) satellite signals to tell the emergency response center your approximate location.

The AGPS feature has limitations, so always tell the emergency response center your best knowledge of your location. Remain on the phone for as long as the emergency response center instructs you.

AGPS **might not work** for emergency calls, if your local emergency response center does not process AGPS location information. For details, contact your local authorities.

If your mobile device cannot find strong AGPS satellite signals, the location of the nearest cell tower in contact with your mobile device is automatically provided to the emergency response center.

AGPS Performance Tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.

AGPS uses satellites controlled by the U.S. government and subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes might affect AGPS performance.

Safety & General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

DRAFT

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: **www.motorola.com**.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.

DRAFT

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For more information, see "Smart Practices While Driving."

Operational Warnings

Obey all posted signs when using mobile devices in public areas.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

DRAFT

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see "Battery Use & Safety."

Keep Your Mobile Device & Its Accessories Away From Small Children

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.

DRAFT

- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at **direct.motorola.com/hellomoto/nss/AcousticSafety.asp** (in English only).

DRAFT

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Apr0109]

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

DRAFT

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use & Care

To care for your Motorola phone, please keep it away from:

liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.

extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.

microwaves

Don't try to dry your phone in a microwave oven.

dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.

cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.

the ground

Don't drop your phone.

DRAFT

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	**One (1) year** from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	**Limited lifetime warranty** for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	**Limited lifetime warranty** for the lifetime of ownership by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	**The balance of the original warranty or for ninety (90) days** from the date returned to the consumer, whichever is longer.

DRAFT

Exclusions (Products and Accessories)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	**Ninety (90) days** from the date of purchase.

DRAFT

Exclusions (Software)

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	**All Products, Accessories, and Software:** 1-800-331-6456
Canada	**All Products:** 1-800-461-4575
TTY	1-888-390-6456

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

DRAFT

What Other Limitations are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their

DRAFT

box or a label on the box. To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: **http://www.who.int/peh-emf**

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to

DRAFT

subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Caring for the Environment by Recycling

This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. Do not dispose of your battery or mobile device in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: **www.motorola.com/recycling**

DRAFT

Disposal of your Mobile Device Packaging & Product Guide

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply. See
www.dtsc.ca.gov/hazardouswaste/perchlorate
There is no special handling required by consumers.

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For instructions on how to delete all personal information from your device, see your product guide.

  Note: For information on backing up your mobile device data before erasing it, go to **www.motorola.com** and navigate to the "downloads" section of the consumer Web page for "Motorola Backup" or "Motorola Phone Tools."

DRAFT

- **Understanding AGPS**—To provide location information for emergency calls, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at **privacy@motorola.com**, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.

TM

- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

DRAFT

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

DRAFT

Motorola, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048
www.hellomoto.com

Note: Do not ship your phone to the above address. If you need to return your phone for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. All other product or service names are the property of their respective owners.

© 2009 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: TBD-A

U.S. patent Re. 34,976

DRAFT

DRAFT

accessories

more information

GOTO

accessories: www.motorola.com
guides: www.motorola.com/support